


Storage Tanks for Hot Water Supply Boilers ASME, Vertical, Polymer-lined, Insulated and Jacketed

Model No.	Gallons Storage	Dimensions in Inches					Circulating Connections for HWS Boiler NPT ①	Water Inlet and Outlet Connections NPT	Drain Valve Fitting NPT	Approx. Shipping Weight lbs
		A	B	C	D	F				
V 225A-PI	225	34x37	83	17	38	21	3	2	1	870
V 250A-PI	250	34x37	87	17	38	21	3	2	1	920
V 300A-PI	300	46	75	19	41	31	3	2	1	1240
V 400A-PI	400	46	87	19	41	31	3	2	1	1400
V 475A-PI	475	46	101	19	41	31	3	3	2	1580
V 500A-PI	500	56	78	20	42	31	3	3	2	1730
V 600A-PI	600	56	90	20	42	31	3	3	2	1920
V 750A-PI	750	67	83	22	44	40	3	3	2	2330
V 900A-PI	900	67	95	22	44	40	3	3	2	2600
V 1000A-PI	1000	67	107	22	44	40	3	3	2	2840
V 1250A-PI	1250	75	94	21	43	47	3	3	2	3850
V 1500A-PI	1500	75	106	21	43	47	3	3	2	4210
V 1750A-PI	1750	75	130	21	43	47	3	3	2	4960
V 2000A-PI	2000	75	142	21	43	47	3	3	2	5330
V 2500A-PI	2500	75	154	21	43	47	3	3	2	5690
V 3000 A-PI	3000	75	178	21	43	47	3	3	2	6420

① Connecting multiple water heaters or HWS boilers to the same tank may require additional circulation fittings. Dimensions are in inches unless otherwise noted.



Tank sizes 1000, 1500, 1750, 2000, 2500 and 3000 include horizontal shipping skids (not shown).

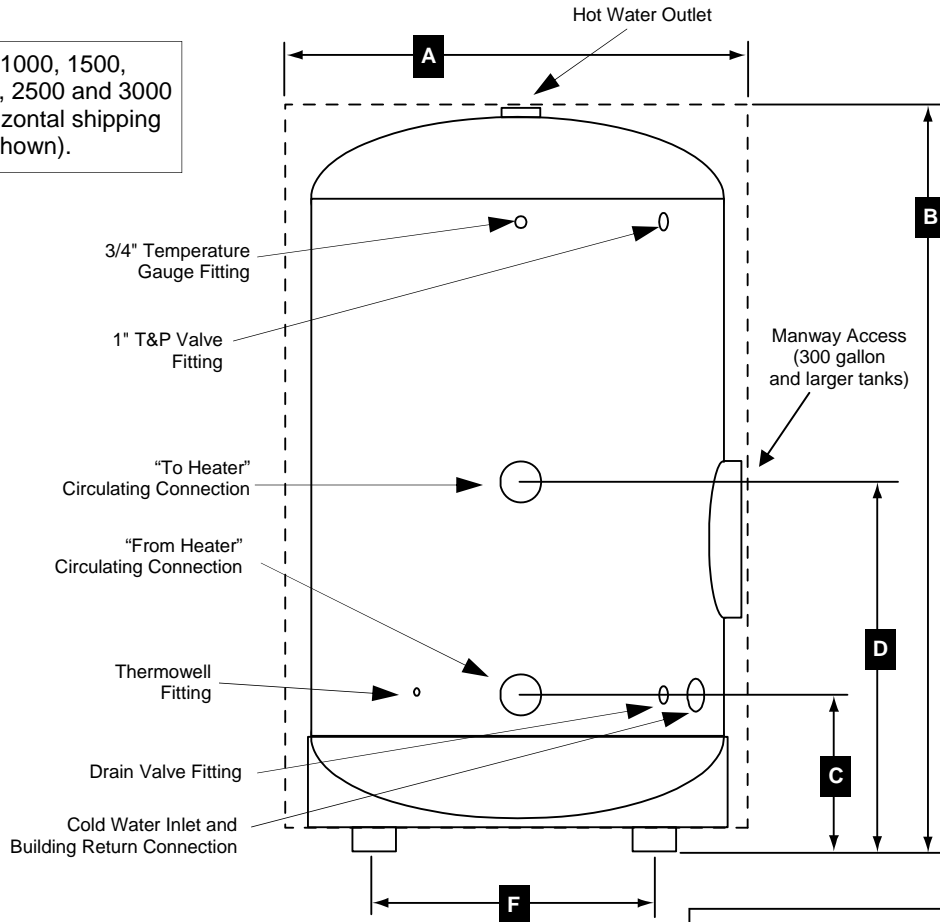

Specifications and dimensions may change without notice.